

# AWNING & CASEMENT OPERATION



## SG SERIES

### Operating Awning Windows


Most awning windows use chainwinders to operate the sash. They have three operable components - a winding **arm**, lock **button** & **key** lock (see Fig. 4). To prevent interference with window

furniture (ie: curtains), the plastic handle on the arm folds flat. Pull the handle away from the arm, then fold.



When rotated **clockwise**, the winding arm **opens** the window.

The lock **button** allows the window to be closed but not opened. To then open the window, you will need to first use the **key** to reset the button.

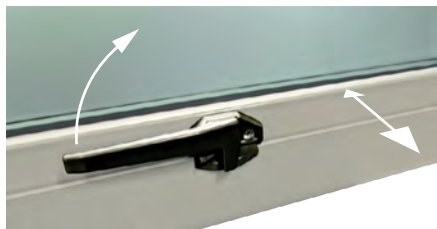

For awning windows without chainwinders, **latches** are fitted. Rotating the handle unlatches the sash from the closed position, allowing the window to be opened. Reverse actions to close.

### Operating Casement Windows

Rotating casement handles 90 degrees unlatches the sash from the closed position, allowing the window to be pushed open. To close the window, reverse the process



### Casement flyscreen operation

These flyscreens are fixed to the frame via **magnetic** strips. The finger-pulls make removal easy. Just peel the screen away from the frame to remove, & let it fall back against the frame to fasten securely



### Awning Window flyscreen fitting & removal

To fit the flyscreen to an awning, first orient the screen with the 'finger pull' to the top. Then insert the base of the screen in the **channel** above the winder (see Fig. 1). Next, lean the top of the screen towards the window frame, then using the finger-pull lower the top of the screen so that it fits into the channel (see Fig. 2). Removal is by reversing the technique

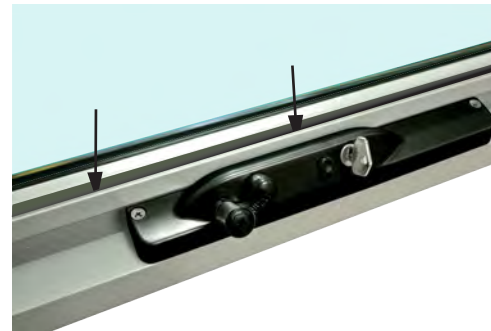


FIGURE 1


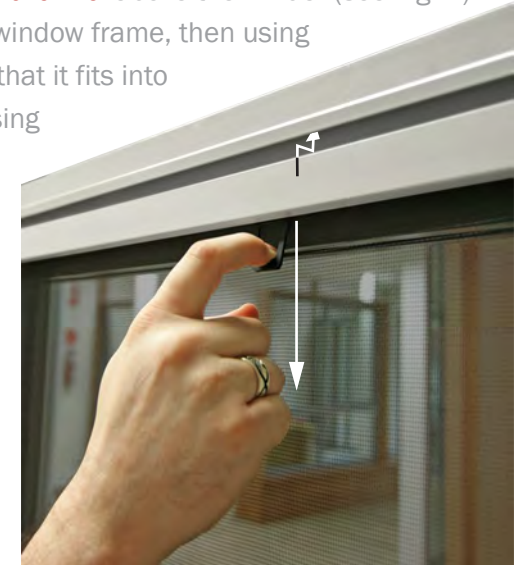


FIGURE 2

# ATTENTION INSTALLER !!

- 1 Ensure that openings into which windows & doors are to be fitted have adequate clearance to the perimeter of the frames
- 2 Fit flashings where required in accordance with relevant Standards & Codes
- 3 Install frames square & plumb, with all sashes in their closed position
- 4 Allow a minimum of 10mm head clearance between frame trimmer / lintel, & window or door frame (except for Bifold, which needs minimum 30mm clearance)

\*Under NO circumstance should building loads be carried by the non-load bearing window or door assemblies / fittings.

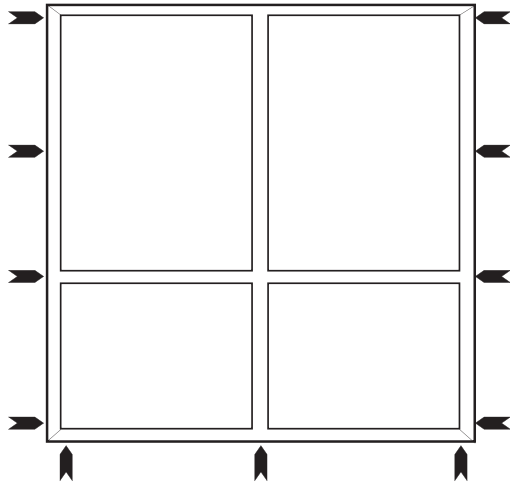

- 5 Pack & fix windows & doors at the points illustrated in the above diagram. Where reveals are fitted, the pre-drilling of these is recommended to prevent the splitting of the timber

\*Additional fixings may be required in high wind-load areas

- 6 Allow a minimum of 10mm clearance between product sills & any sill bricks
- 7 The entire length of the sill should be supported on all door products
- 8 Ensure that sill drainage holes are NOT covered by external claddings or coatings

# ON SITE CARE

On site, products should be stored in a clean, dry area away from cement, lime, paint etc prior to installation. Once installed, all products should be protected from fallout such as wet plaster, mortar, render, paint, grinding & welding spatter. An effective method is to cover the face of your product(s) with clear plastic, or have an approved coating applied. If strippable coatings or pressure sensitive tapes are used to protect exposed surfaces, care should be taken NOT to damage the finish during their removal. Prolonged exposure to sunlight can make them increasingly difficult to remove. Should substances such as wet plaster, mortar or render fall onto the product, the substances should be removed immediately & the soiled area washed down with clean water.

A primer or sealer should be applied to internal timbers to preserve exposed surfaces during construction.

Door tracks & sills should be protected to avoid damage from planks, scaffolding, barrows etc.

Contact your Rylock Sales Office on the number below for further recommendations on protective coatings.

# MAINTENANCE

## ALUMINIUM FRAMES

The external face of window & door frames should be washed with a mild detergent & clean water to remove deposits. If the product is exposed to salt air or industrial pollutants, it should be washed every 3 months. Keep tracks free from dirt & grit to avoid premature wear. Ensure drainage slots are kept clear to maximise drainage performance.

## GLASS

To clean, flood the surface with a spray on solution, or with a cloth saturated with the cleaning solution. Scrub the wetted area with a clean, lint-free towel or cloth. Wipe dry with a clean, lint-free towel or cloth.

## TIMBER

The internal surface finish should be kept clean, & refinishing of the timber should be undertaken when coatings either break down or wear away.

## HARDWARE

Keep locks, hinges & wheels / rollers clean. Regularly lubricate with silicone spray to ensure optimum performance. Note that cleaning & lubrication of hardware should be performed monthly in coastal areas.

## STAINLESS STEEL FLYSCREENS

Stainless steel fly-screen mesh needs to be cleaned regularly with warm soapy water & a soft cloth, to remove build-up of salt & dirt, which increases the potential for tea-staining (on stainless mesh). This needs to be undertaken yearly at minimum, with cleaning required monthly for buildings in close proximity to the ocean.

## ADJUSTMENTS

All products should be adjusted as required to maintain correct performance. Instructions on reverse page.

**BRUNSWICK** Factory 2 / 17 Hope Street, 03 9385 8700

**CLAYTON** Home Ideas Centre, 1686 Princes Hwy, 03 9542 7100

**MENTONE** 47 Shearson Crescent, 03 9581 7200

**SYDNEY** 3 Ellis Avenue, Alexandria, 02 8335 4400



**CANBERRA** HIA Home Ideas, Collie St, Fyshwick, 1800 RYLOCK

**HOBART** Building Selection Centre, 309 Liverpool St, 1800 RYLOCK

**LAUNCESTON** Building Selection Centre, 262 York St, 1800 RYLOCK

**ADELAIDE** 26 Audley St, Woodville North, 08 8413 5500